INNOLUX DISPLAY CORPORATION LCD MODULE

SPECIFICATION

Customer:	
Model Name:	AT050TN01
SPEC NO.:	A050-01-TT-04
Date:	2005/12/27
Varsian:	0.4

- Preliminary Specification
- Final Specification

For Customer's Acceptance

Approved by	Comment

Approved by	Reviewed by	Prepared by
ANGE TO SE	黄郁色公路	王秀种, 20106

InnoLux copyright 2004 All rights reserved, Copying forbidden.

Record of Revision

Version	Revise Date	Page	Content
1	2005/05/05		Initial release
	2005/07/11	1	Modify the module weight from 160g to 114±10g.
		3	Modify the scanning direction from "Down to up" to "Up to down", and from "Up to down" to" Down to up".
		5	Modify the V_{CC} , AV_{DD} , V_{GH} , V_{GL} , V_{GH} - V_{GL} from "6, 7, 40,-20, 40" to "6.0, 7.0, 40.0, -20.0, 40.0".
		6	Modify the V_{CC} , AV_{DD} , V_{GH} , V_{GL} , V_{iAC} from "5, 5, 15, -10, 3" to "5.0, 5.0, 15.0, -10.0, 3.0".
		7	Modify the Input voltage from "12.0V _{dc} " to "12.0V".
	2005/10/25	1	Divide power consumption into backlight power consumption and panel power consumption.
			Modify the lamp life time from 10,000(Min.) to 20,000(Min.). Modify the frequency from 55(Typ.),80(Max.) to 50(Typ.), 60(Max). Modify the measure inverter type from HIU-742A to DA1205 in Note 6.
			Divide lamp starting voltage V_S into $V_S(25^\circ\mathbb{C})$ and $V_S(0^\circ\mathbb{C})$.
		19	Update handling precautions.
	2005/12/27	15	Change the figure for definition of viewing angle.
		22	Change the packaging drawing.

The copyright belongs to InnoLux. Any unauthorized use is prohibited.

Contents:

1.	General Specifications	1
2.	Pin Assignment	2
	2.1. TFT LCD Panel Driving Section	2
	2.2. Backlight Unit Section	4
3.	Operation Specifications	5
	3.1. Absolute Maximum Rating	5
	3.1.1. Typical Operation Conditions	6
	3.1.2. Current Consumption	7
	3.1.3. Backlight Driving Conditions	7
	3.2. Timing Characteristics	8
	3.2.1. Timing Conditions	8
	3.2.2. Timing Diagram	10
4.	Optical Specifications	14
5.	Reliability Test Items	18
6.	General Precautions	19
	6.1. Safety	19
	6.1. Safety	19
	6.3. Static Electricity	19
	6.4. Storage	19
	6.5. Cleaning	19
7.	Mechanical Drawing	20
8.	Package Drawing	21
	8.1. Packaging Material Table	21
	8.2. Packaging Quantity	21
	8.3. Packaging Drawing	22



SPEC NO.: A050-01-TT-04

PAGE: 1/22

1. General Specifications

No.	Item	Specification	Remark
1	LCD size	5.0 inch(Diagonal)	
2	Driver element	a-Si TFT active matrix	
3	Resolution	320X3(RGB)X234	
4	Display mode	Normally White, Transmissive	
5	Dot pitch	0.107(W)X0.3185(H) mm	
6	Active area	102.72(W)X74.529(H) mm	
7	Module size	119.3(W)X91.4(H)X6.3(D) mm	Note 1
8	Surface treatment	Anti-Glare	
9	Color arrangement	RGB-stripe	
10	Interface	Analog	
11	Backlight power consumption	2.55W(Typ.)	
12	Panel power consumption	88mW(Typ.)	
13	Weight	114g ±10%	

Note 1: Refer to Mechanical Drawing.

INITOLOX

SPEC NO.: A050-01-TT-04 PAGE: 2/22

2. Pin Assignment

2.1. TFT LCD Panel Driving Section

Pin No.	Symbol	I/O	Function	Remark
1	GND	-	Ground	
2	V _{CC}	Р	Supply voltage for logic control circuit scan driver	
3	V_{GL}	Р	Negative power for scan driver	
4	V_{GH}	Р	Positive power for scan driver	
5	STVR	I/O	Vertical start pulse	Note 1
6	STVL	I/O	Vertical start pulse	Note 1
7	CKV	I	Shift clock input for scan driver	
8	U/D		UP/DOWN scan control input	Note 1, 2
9	OEV		Output enable control for scan driver	
10	V _{COM}	I	Common electrode driving signal	
11	V _{COM}	I	Common electrode driving signal	
12	L/R	I	LEFT/RIGHT scan control input	Note 1, 2
13	MOD	I	Sequential sampling and simultaneous sampling setting	
14	OEH	İ	Output enable control for data driver	
15	STHL	I/O	Start pulse for horizontal scan line	Note 1
16	STHR	I/O	Start pulse for horizontal scan line	Note 1
17	СРН3	I	Sampling and shifting clock pulse for data driver	
18	CPH2	I	Sampling and shifting clock pulse for data driver	
19	CPH1	I	Sampling and shifting clock pulse for data driver	
20	V _{CC}	Р	Supply voltage for logic control circuit scan driver	

NNOLUX

SPEC NO.: A050-01-TT-04
PAGE: 3/22

21	GND	-	Ground	
22	V _R	I	Alternated video signal (Red)	
23	V _G	I	Alternated video signal (Green)	
24	V _B	I	Alternated video signal (Blue)	
25	AV _{DD}	Р	Supply voltage for analog circuit	
26	AV _{SS}	Р	Ground for analog circuit	


I: input, O: output, P: Power

Note 1: Selection of scanning mode

Setting of scan control input		IN/OUT	state for st	art pulse	Scanning direction		
U/D	L/R	STVR	STVL	STHR	STHL		
GND	V _{CC}	0	I	0	I	Up to down, left to right	
V _{CC}	GND	I	0	I	0	Down to up, right to left	
GND	GND	0			0	Up to down, right to left	
V _{CC}	V _{CC}		0	0		Down to up, left to right	

Note 2: Definition of scanning direction.

Refer to the figure as below:

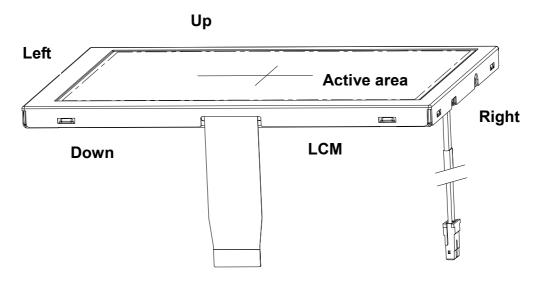

Note 3: MOD=H: Simultaneous sampling. MOD=L: Sequential sampling.

Please set CPH2 and CPH3 to GND when MOD=H.



SPEC NO.: A050-01-TT-04

PAGE: 4/22

2.2. Backlight Unit Section

Pin No.	Symbol	I/O	Function	Remark
1	н	Р	Power supply for backlight unit(High voltage)	Pink
2	GND	Р	Ground for backlight unit	White



SPEC NO.: A050-01-TT-04

PAGE: 5/22

3. Operation Specifications

3.1. Absolute Maximum Rating

(GND=AV_{SS}=0V, Note 3)

	ND=AV _{SS} =UV, N				
Item	Symbol	Val	Unit	Remark	
item		Min.	Max.	Oilit	Keillaik
	V _{CC}	-0.3	6.0	V	
	AV_{DD}	-0.3	7.0	V	
Power voltage	V _{GH}	-0.3	40.0	V	
	V _{GL}	-20.0	0.3	V	
	V_{GH} - V_{GL}	-0.3	40.0	V	
Input signal voltage	Vi	-0.2	AV _{DD} +0.2	V	Note 1
Imput signal voltage	Vı	-0.3	V _{CC} +0.3	V	Note 2
Operation temperature	T _{OP}	-10	60	°C	
Storage temperature	T _{ST}	-20	70	$^{\circ}\!\mathbb{C}$	

Note 1: V_R , V_G , V_B .

Note 2: STHL, STHR, OEH, L/R, CPH1~CPH3, STVR, STVL, OEV, CKV, U/D.

Note 3: The absolute maximum rating values of the module should not be exceeded. Once exceeded absolute maximum rating values, the characteristics of the module may not be recovered. Even in an extreme condition, may result in module permanently destroyed.



OLUX SPEC NO.: A050-01-TT-04 PAGE: 6/22

3.1.1. Typical Operation Conditions

(GND=AV_{SS}=0V, Note 4)

(GND-AV _{SS} -0V, Note 4)						
ltem	Symbol		Values	Unit	Remark	
Rom	- Cymbol	Min.	Тур.	Max.	Oiiit	Kemark
	V _{CC}	4.8	5.0	5.2	V	
Power voltage	AV _{DD}	4.8	5.0	5.2	V	
Power voltage	V_{GH}	14.3	15.0	15.7	V	
	V_{GL}	-10.5	-10.0	-9.5	V	
	V _{iA}	0.2	-	AV _{DD} -0.2	٧	Note 1
Video signal amplitude (V _R , V _G , V _B)	V _{iAC}	-	3.0	-	V	AC component
	V _{iDC}	-	AV _{DD} /2	_	V	DC component
	V _{CAC}	-	5.2	-	V	Note 2
V _{COM}	V _{CDC}	1.50	1.70	1.90	V	DC component
Input logic high voltage	V _{IH}	0.8V _{CC}	-	V _{CC}	V	Note 3
Input logic low voltage	V _{IL}	0	-	0.2V _{CC}	V	NOIG J

Note 1: Refer to Fig.3-3-(a).

Note 2: The brightness of LCD panel could be changed by adjusting the AC component of V_{COM} .

Note 3: STHL, STHR, OEH, L/R, CPH1~CPH3, STVR, STVL, OEV, CKV, U/D.

Note 4: GND, V_{CC} , and V_{GL} are applied to LCD first and then V_{GH} is applied.

NNOLUX

SPEC NO.: A050-01-TT-04

PAGE: 7/22

3.1.2. Current Consumption

(GND=AV_{SS}=0V)

Item	Symbol	Values			Unit	Remark	
item	Symbol	Min.	Тур.	Max.	Unit	Komark	
Current for Driver	I _{GH}		0.2	0.8	mA	V _{GH} =15V	
	I _{GL}		-0.5	-1	mA	V _{GL} = -10V	
	I _{CC}	-	4	8	mA	V _{CC} =5V	
	I _{DD}		12	20	mA	AV _{DD} =5V	

3.1.3. Backlight Driving Conditions

Item	Symbol		Values		Unit	Remark	
item	Symbol	Min.	Тур.	Max.	Onit	Komark	
Lamp voltage	VL	409	425	458	V _{rms}	Note 1,6	
Lamp current	I <u>L</u>	3	6	7	mA _{rms}	Note 6	
Frequency	FL	-	50	60	kHz	Note 3	
Lamp starting voltage	V _S (25°ℂ)	-	-	520	V _{rms}	Note 1,4,6	
Lamp starting voltage	V _S (0°C)	-	-	640	V _{rms}	Note 2,4,6	
Lamp life time	-	20,000	-	-	Hr	Note 5	

- Note 1: The ambient temperature is 25°℃.
- Note 2: The ambient temperature is 0° C.
- Note 3: The lamp frequency should be selected as different as possible from display horizontal synchronous signal to avoid interference.
- Note 4: For starting the backlight unit, the output voltage of DC/AC's transformer should be larger than the maximum lamp starting voltage.
- Note 5: The "lamp life time" is defined as the module brightness decay to 50% of original brightness when the ambient temperature is 25°C and I_L =6mA.
- Note 6: Measure inverter type: DA1205, C=27pF, Input Voltage=12.0V.

InnoLux

SPEC NO.: A050-01-TT-04 PAGE: 8/22

3.2. Timing Characteristics

3.2.1. Timing Conditions

ltom	Values			ues		Domouk	
Item	Symbol	Min.	Тур.	Max.	Unit	Remark	
Rising time	t _r	-	-	10	ns	Note 1	
Falling time	t _f	-	-	10	ns	Note 1	
High and low level pulse width	t _{CPH}	141	156	171	ns	СРН1~СРН3	
CPH pulse duty	t _{CWH}	40	50	60	%	CPH1~CPH3	
	t _{C12}						
CPH pulse delay	t _{C23}	20	t _{CPH} /3	t _{CPH} /2	ns	СРН1~СРН3	
	t _{C31}						
STH setup time	t _{suн}	20	-	-	ns	STHR, STHL	
STH hold time	t _{HDH}	10	\mathbf{C}	-	ns	STHR, STHL	
STH pulse width	t _{STH}	-	1	-	t _{CPH}	STHR, STHL	
STH period	t _H	61.5	63.5	65.5	μs	STHR, STHL	
OEH pulse width	t _{OEH}	1	-	-	t _{CPH}		
Sample and hold disable time	t _{DIS1}	1	-	-	t _{CPH}		
OEV pulse width	t _{OEV}	-	10	-	t _{CPH}		
CKV pulse width	t _{CKV}	-	40	-	t _{CPH}		
Clean enable time	t _{DIS2}	-	8	-	t _{CPH}		
Horizontal display timing range	t _{DH}	-	960	-	t _{CPH} /3		
STV setup time	t _{suv}	-	3	-	t _{CPH}	STVL, STVR	
STV hold time	t _{HDV}	-	1	-	t _H	STVL, STVR	
STV pulse width	t _{STV}	-	1	-	t _H	STVL, STVR	

INNOLUX

SPEC NO.: A050-01-TT-04 PAGE: 9/22

				.,,,		
Horizontal lines per field	t _V	256	262.5	268	t _H	Note 2
Vertical display start	t _{SV}	-	3	-	t _H	
V _{COM} rising time	t _{rCOM}	1	1	5	μs	
V _{COM} falling time	t_{fCOM}	ı	ı	5	μs	
V _{COM} delay time	t _{DCOM}	-	-	5	μs	
RGB delay time	t _{DRGB}	-	-	4	μs	

Note 1: For all of the logic signals

Note 2: Please don't use odd horizontal lines to drive LCD panel for both odd and even field simultaneously.



INNOLUX

3.2.2. Timing Diagram

SPEC NO.: A050-01-TT-04

PAGE: 10/22

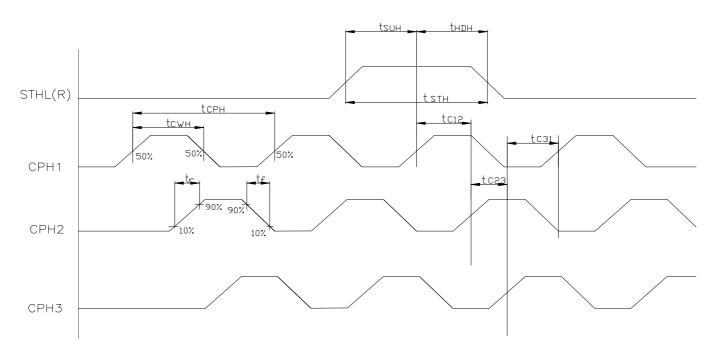


Fig.3-1 Sampling clock timing

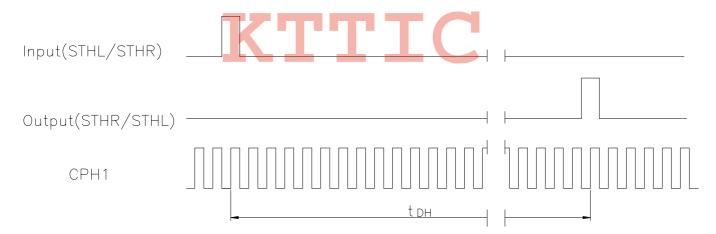


Fig.3-2 Horizontal display timing range

INNOLUX

SPEC NO.: A050-01-TT-04

PAGE: 11/22


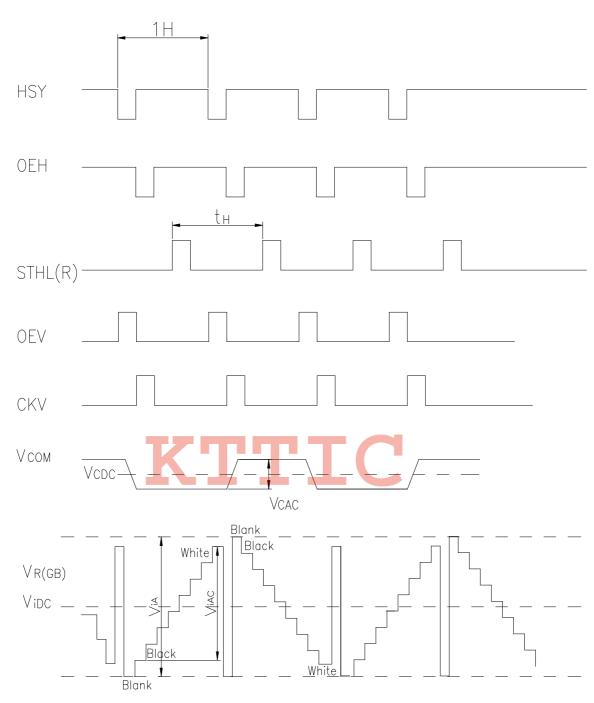


Fig.3-3-(a) Horizontal timing

NNOLUX

SPEC NO.: A050-01-TT-04
PAGE: 12/22

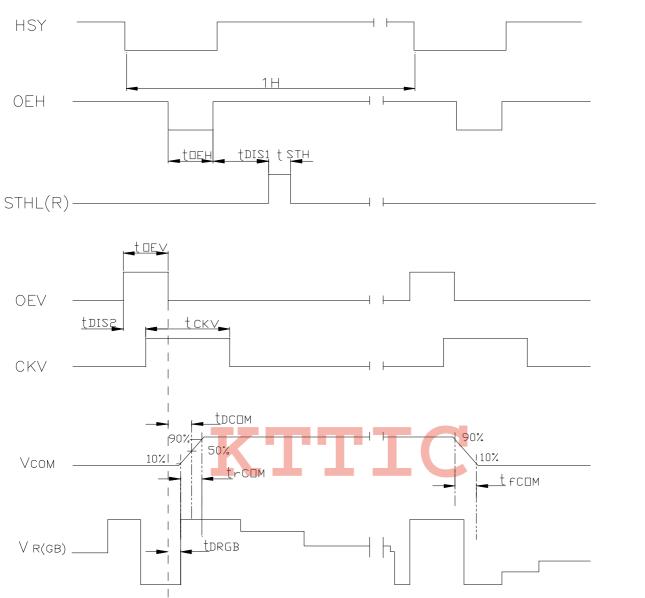

Note: The falling edge of OEV should be synchronized with the falling edge of OEH Fig.3-3-(b) Detail horizontal timing

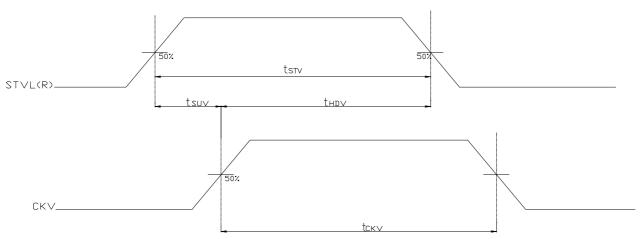


Fig.3-4 Vertical shift clock timing horizontal timing

INNOLUX

SPEC NO.: A050-01-TT-04 PAGE: 13/22

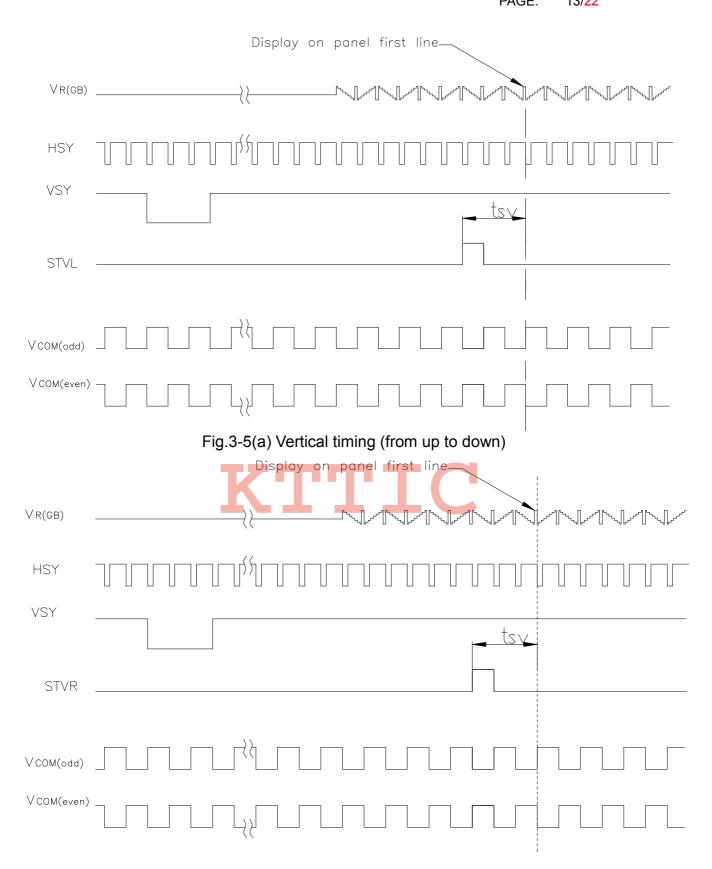


Fig.3-5(b) Vertical timing (from down to up)

SPEC NO.: A050-01-TT-04

14/22 PAGE:

4. Optical Specifications

Item	Symbol	Condition	Values			Unit	Remark
item	Symbol	Condition	Min.	Тур.	Max.	Unit	Remark
	θ_{L}	Ф=180°(9 o'clock)	65	75	-		
Viewing angle	θ_{R}	Ф=0°(3 o'clock)	65	75	-	40000	Note 1
(CR≥10)	θτ	Φ=90°(12 o'clock)	45	55	-	degree	
	θ_{B}	Φ=270°(6 o'clock)	45	55	-		
Doggood time	T _{ON}		-	15	30	msec	Note 3
Response time	T _{OFF}		-	20	40	msec msec	Note 3
Contrast ratio	CR		200	250	-	-	Note 4
	W _X	Normal θ=Φ=0°	0.26	0.31	0.36	-	Note 2
Color chromaticity	W _Y		0.28	0.33	0.38		Note 5 Note 6
Luminance	L		300	350	-	cd/m²	Note 6
Luminance uniformity	Yu		70%	75%	-	-	Note 7

Test Conditions:

- 1. V_{CC} =5V, AV_{DD} =5V, I_L =6mA (Backlight current), the ambient temperature is 25 $^{\circ}$ C.
- 2. The test systems refer to Note 2.

NNOLUX

SPEC NO.: A050-01-TT-04
PAGE: 15/22

Note 1: Definition of viewing angle range

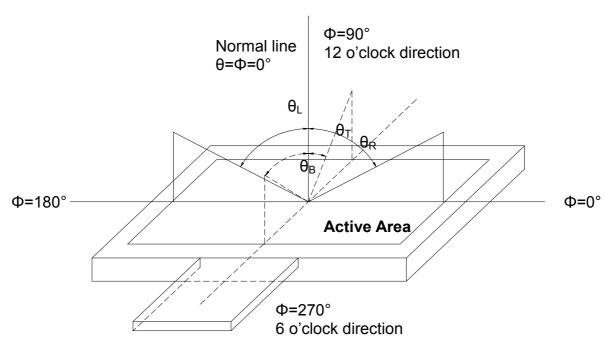


Fig. 4-1 Definition of viewing angle

Note 2: Definition of optical measurement system.

The optical characteristics should be measured in dark room. After 30 minutes operation, the optical properties are measured at the center point of the LCD screen. (Response time is measured by Photo detector TOPCON BM-7, other items are measured by BM-5A/Field of view: 1° /Height: 500mm.)

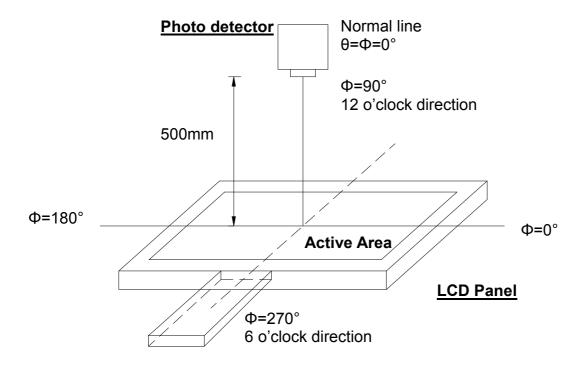


Fig. 4-2 Optical measurement system setup

SPEC NO.: A050-01-TT-04

PAGE: 16/22

Note 3: Definition of Response time

The response time is defined as the LCD optical switching time interval between "White" state and "Black" state. Rise time (T_{ON}) is the time between photo detector output intensity changed from 90% to 10%. And fall time (T_{OFF}) is the time between photo detector output intensity changed from 10% to 90%.

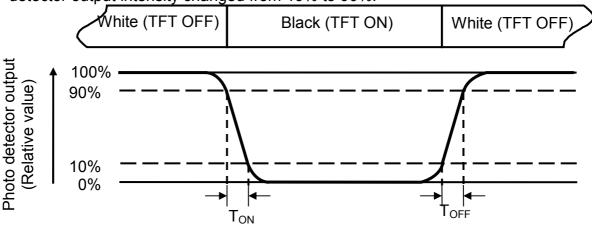


Fig. 4-3 Definition of response time

Note 4: Definition of contrast ratio

Contrast ratio (CR) = Luminance measured when LCD is on the "White" state

Luminance measured when LCD is on the "Black" state

White $V_i = V_{i50\%} \pm 1.5 \text{ V}$ Black $V_i = V_{i50\%} \mu 2.0 \text{ V}$

"±" means that the analog input signal swings in phase with V_{COM} signal.

"μ" means that the analog input signal swings out of phase with V_{COM} signal.

V_{i50%}: The analog input voltage when transmission is 50%

The 100% transmission is defined as the transmission of LCD panel when all the input terminals of module are electrically opened.

Note 5: Definition of color chromaticity (CIE1931)

Color coordinates measured at center point of LCD.

Note 6: All input terminals LCD panel must be ground while measuring the center area of the panel.

NNOLUX

SPEC NO.: A050-01-TT-04
PAGE: 17/22

Note 7: Definition of Luminance Uniformity

Active area is divided into 9 measuring areas (Refer to Fig. 4-4). Every measuring point is placed at the center of each measuring area.

Luminance Uniformity (Yu) = $\frac{B_{min}}{B_{max}}$

L----- Active area length W---- Active area width

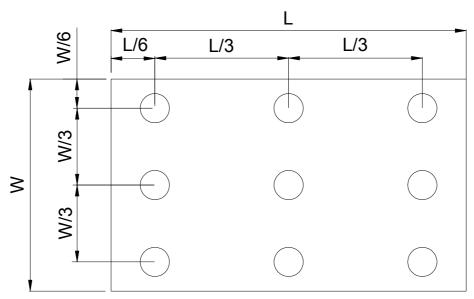


Fig. 4-4 Definition of measuring points

 \mathbf{B}_{max} : The measured maximum luminance of all measurement position. \mathbf{B}_{min} : The measured minimum luminance of all measurement position.

SPEC NO.: A050-01-TT-04

PAGE: 18/22

5. Reliability Test Items

(Note3)

Item	Test (Conditions	Remark
High Temperature Storage	Ta = 70°C	240 hrs	Note 1
Low Temperature Storage	Ta = -20°C	240hrs	Note 1
High Temperature Operation	Ts = 60°C	240hrs	Note 2
Low Temperature Operation	Ta = -10°C	240hrs	Note 1
Operate at High Temperature and Humidity	+40℃, 90%RH	240 hrs	
Thermal Shock		C/30 min for a total 100 d temperature and end	
Vibration Test	Frequency range:10 Stroke:1.5mm Sweep:10Hz~55Hz~ 2 hours for each dire (6 hours for total)	-10Hz	
Mechanical Shock	100G 6ms,±X, ±Y, ± direction	Z 3 times for each	
Package Vibration Test	Random Vibration: 0.015G*G/Hz from 5 from 200-500HZ 2 hours for each dire (6 hours for total)	i-200HZ, -6dB/Octave ection of X. Y. Z.	
Package Drop Test	Height:60 cm 1 corner, 3 edges, 6	surfaces	
Electro Static Discharge	± 2KV, Human Boo	dy Mode, 100pF/1500Ω	

Note 1: Ta is the ambient temperature of samples.

Note 2: Ts is the temperature of panel's surface.

Note 3: In the standard condition, there shall be no practical problem that may affect the display function.

NNOLUX SPEC NO.: A050-01-TT-04

PAGE: 19/22

6. General Precautions

6.1. Safety

Liquid crystal is poisonous. Do not put it in your mouth. If liquid crystal touches your skin or clothes, wash it off immediately by using soap and water.

6.2. Handling

- 1. The LCD panel is plate glass. Do not subject the panel to mechanical shock or to excessive force on its surface.
- 2. The polarizer attached to the display is easily damaged. Please handle it carefully to avoid scratch or other damages.
- 3. To avoid contamination on the display surface, do not touch the module surface with bare hands.
 - 4. Keep a space so that the LCD panels do not touch other components.
- 5. Put cover board such as acrylic board on the surface of LCD panel to protect panel from damages.
- 6. Transparent electrodes may be disconnected if you use the LCD panel under environmental conditions where the condensation of dew occurs.
 - 7. Do not leave module in direct sunlight to avoid malfunction of the ICs.

6.3. Static Electricity

- 1. Be sure to ground module before turning on power or operating module.
- 2. Do not apply voltage which exceeds the absolute maximum rating value.

6.4. Storage

- 1. Store the module in a dark room where must keep at +25±10 $^{\circ}$ C and 65%RH or less.
- 2. Do not store the module in surroundings containing organic solvent or corrosive gas.
 - 3. Store the module in an anti-electrostatic container or bag.

6.5. Cleaning


- 1. Do not wipe the polarizer with dry cloth. It might cause scratch.
- 2. Only use a soft sloth with IPA to wipe the polarizer, other chemicals might permanent damage to the polarizer.

InnoLux

SPEC NO.: A050-01-TT-04

PAGE: 20/22

7. Mechanical Drawing

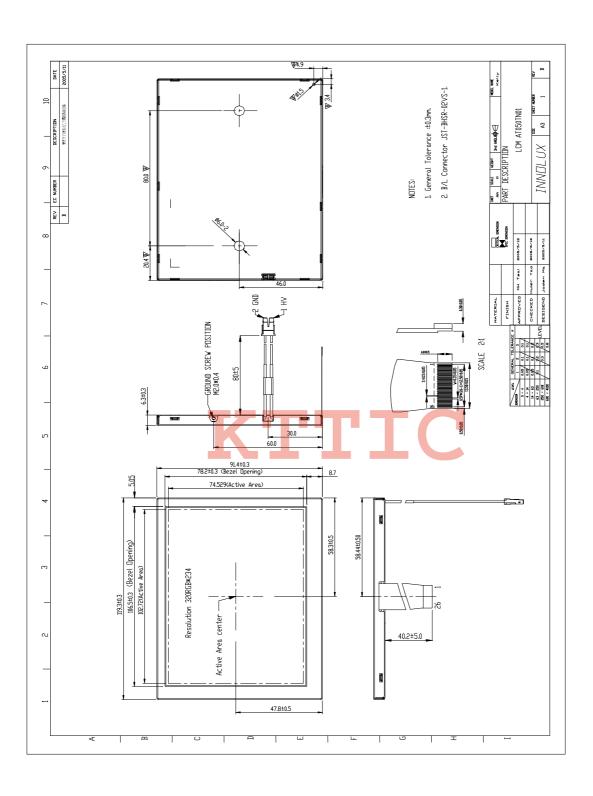

SPEC NO.: A050-01-TT-04

PAGE: 21/22

8. Package Drawing

8.1. Packaging Material Table

No.	Item	Model (Material)	Dimensions(mm)	Unit Weight (kg)	Quantity	Remark
1	LCM Module	AT050TN01	119.3×91.4×6.3	0.1142	68pcs	
2	Partition	BC Corrugated paper	512×349×226	1.150	1set	
3	Corrugated Bar	B Corrugated paper	349X198X49	0.316	1set	
4	Corrugated Board	B Corrugated paper	512X349	0.098	2pcs	
5	Dust-Proof Bag	PE	700X530	0.0604	1pcs	
6	A/S Bag	PE	180×133×0.2	0.0018	68pcs	
7	Carton	Corrugated paper				

8.2. Packaging Quantity

Total LCM quantity in Carton: no. of Partition 4 Rows x quantity per Row 17 = 68

SPEC NO.: A050-01-TT-04

PAGE: 22/22

8.3. Packaging Drawing

